


ENGINE CONTROLS (5.0L) 25-8

1999 EXPLORER/MOUNTAINEER

5.0L

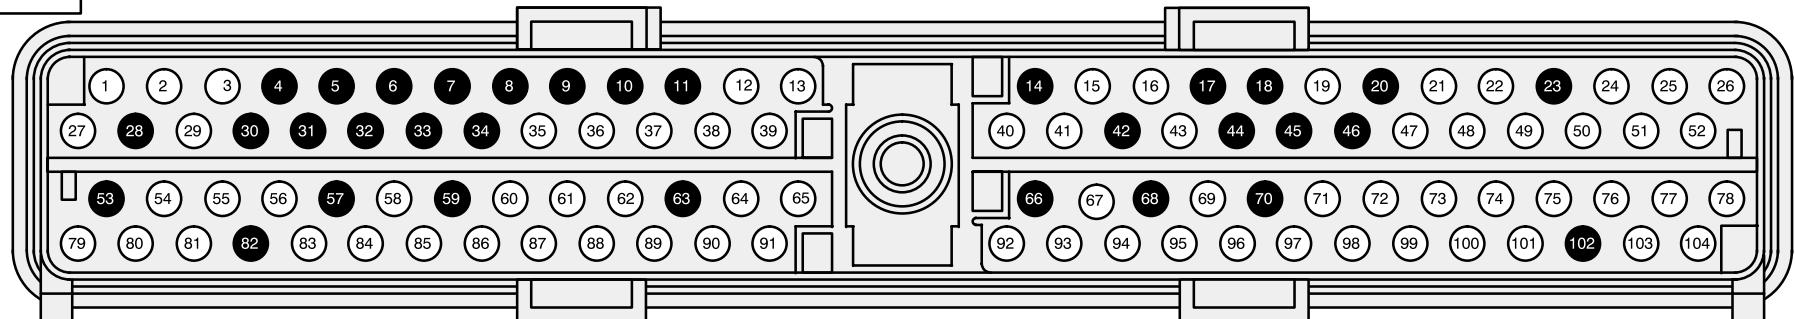

C202
POWERTRAIN CONTROL MODULE (PCM)

| PIN | CIRCUIT | CIRCUIT FUNCTION | PIN | CIRCUIT | CIRCUIT FUNCTION |
|-----|--------------|---------------------------------------|-----|-------------|---|
| 1 | 315 (VT/OG) | Shift Solenoid B | 21 | 138 (BK/PK) | Crankshaft Position (CKP) Sensor |
| 2 | 658 (PK/LG) | Malfunction Indicator Lamp (MIL) | 22 | 139 (GY/YE) | Crankshaft Position (CKP) Sensor |
| 3 | 1144 (YE/BK) | Digital Transmission Range Sensor TR1 | 23 | — | NOT USED |
| 4 | — | NOT USED | 24 | 570 (BK/WH) | Power Ground |
| 5 | — | NOT USED | 25 | 57 (BK) | Chassis Ground |
| 6 | — | NOT USED | 26 | 526 (DB/LG) | Ignition Coil #1 |
| 7 | — | NOT USED | 27 | 237 (OG/YE) | Shift Solenoid A |
| 8 | — | NOT USED | 28 | — | NOT USED |
| 9 | — | NOT USED | 29 | 224 (TN/WH) | Transmission Control Switch (TCS) Input |
| 10 | — | NOT USED | 30 | — | NOT USED |
| 11 | — | NOT USED | 31 | — | NOT USED |
| 12 | 29 (YE/WH) | Fuel Level Input | 32 | — | NOT USED |
| 13 | 107 (VT) | Data Link Connector (DLC) | 33 | — | NOT USED |
| 14 | — | NOT USED | 34 | — | NOT USED |
| 15 | 915 (PK/LB) | SCP Data Bus (-) | 35 | 392 (RD/LG) | Heated Oxygen Sensor #3 (HO2S) Input (Catalyst Monitor) |
| 16 | 914 (TN/OG) | SCP Data Bus (+) | 36 | 968 (TN/LB) | Mass Air Flow (MAF) Sensor Return |
| 17 | — | NOT USED | 37 | 923 (OG/BK) | Transmission Fluid Temperature (ECT) Sensor Input |
| 18 | — | NOT USED | | | |
| 19 | 394 (OG/BK) | Air Suspension Acceleration Input | | | |
| 20 | — | NOT USED | | | |

25-9 ENGINE CONTROLS (5.0L)

1999 EXPLORER/MOUNTAINEER


| PIN | CIRCUIT | CIRCUIT FUNCTION | PIN | CIRCUIT | CIRCUIT FUNCTION |
|-----|--------------|--|-----|-------------|--|
| 38 | 354 (LG/RD) | Engine Coolant Temperature (ECT) Sensor Input | 69 | 331 (PK/YE) | Wide Open Throttle A/C Cutoff (WAC) Relay Output |
| 39 | 743 (GY) | Intake Air Temperature (IAT) Sensor Input | 70 | — | NOT USED |
| 40 | 238 (DG/YE) | Fuel Pump Monitor Input | 71 | 361 (RD) | Power (VPWR) |
| 41 | 348 (VT) | A/C High Pressure Cutoff Switch Input | 72 | 561 (TN/RD) | Fuel Injector #7 Control |
| 42 | — | NOT USED | 73 | 559 (TN/BK) | Fuel Injector #5 Control |
| 43 | 305 (LB/PK) | NOT USED | 74 | 557 (BN/YE) | Fuel Injector #3 Control |
| 44 | — | NOT USED | 75 | 555 (TN) | Fuel Injector #1 Control |
| 45 | — | NOT USED | 76 | 570 (BK/WH) | Power Ground |
| 46 | — | NOT USED | 77 | 570 (BK/WH) | Power Ground |
| 47 | 360 (BN/PK) | EGR Vacuum Regulator (EVR) Control | 78 | 528 (PK/WH) | Ignition Coil #3 |
| 48 | 11 (TN/YE) | Tachometer | 79 | 911 (WH/LG) | Transmission Control Indicator Lamp (TCIL) Output |
| 49 | 1145 (LB/BK) | Digital Transmission Range (DTR) Sensor TR2 | 80 | 926 (LB/OG) | Fuel Pump Relay Control |
| 50 | 1143 (WH/BK) | Digital Transmission Range (DTR) Sensor TR4 | 81 | 925 (WH/YE) | Electronic Pressure Control (EPC) Solenoid |
| 51 | 570 (BK/WH) | Power Ground | 82 | — | NOT USED |
| 52 | 527 (RD/LB) | Ignition Coil #2 | 83 | 264 (WH/LB) | Idle Air Control (IAC) Valve Control |
| 53 | — | NOT USED | 84 | 136 (DB/YE) | Output Shaft Speed Sensor |
| 54 | 125 (DB/WH) | Torque Converter Clutch Solenoid | 85 | 282 (DB/OG) | Camshaft Position (CMP) Sensor Input |
| 55 | 37 (YE) | Keep Alive Power (B+) | 86 | 347 (BK/YE) | PCM To A/C Cycling Pressure Switch |
| 56 | 191 (LG/BK) | EVAP Canister Purge Valve | 87 | 94 (RD/BK) | Heated Oxygen Sensor #2 (HO2S) Input |
| 57 | — | NOT USED | 88 | 967 (LB/RD) | Mass Air Flow (MAF) Sensor Input |
| 58 | 679 (GY/BK) | Vehicle Speed Sensor (VSS) Input | 89 | 355 (GY/WH) | Throttle Position (TP) Sensor Input |
| 59 | — | NOT USED | 90 | 351 (BN/WH) | Reference Voltage |
| 60 | 74 (GY/LB) | Heated Oxygen Sensor #1 (HO2S) Input | 91 | 359 (GY/RD) | Signal Return |
| 61 | 393 (VT/LG) | Heated Oxygen Sensor #4 (HO2S) Input | 92 | 810 (RD/LG) | Brake Pedal Position (BPP) Switch Input |
| 62 | 791 (RD/PK) | Fuel Tank Pressure Sensor | 93 | 387 (RD/WH) | Heated Oxygen Sensor #1 (HO2S) Heater |
| 63 | — | NOT USED | 94 | 388 (YE/LB) | Heated Oxygen Sensor #2 (HO2S) Heater |
| 64 | 199 (LB/YE) | Digital Transmision Range (DTR) Sensor TR3A | 95 | 389 (WH/BK) | Heated Oxygen Sensor #3 (HO2S) Heater (Catalyst Monitor) |
| 65 | 352 (BN/LG) | Differential Pressure Feedback EGR (DPFE) Sensor | | | |
| 66 | — | NOT USED | | | |
| 67 | 91 (VT/WH) | Canister Vent (CV) Solenoid | | | |
| 68 | — | NOT USED | | | |

ENGINE CONTROLS (5.0L) 25-10

1999 EXPLORER/MOUNTAINEER

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|-----|-------------|---------------------------------------|
| 96 | 390 (TN/YE) | Heated Oxygen Sensor #4 (HO2S) Heater |
| 97 | 361 (RD) | Power (VPWR) |
| 98 | 562 (LB) | Fuel Injector #8 Control |
| 99 | 560 (LG/OG) | Fuel Injector #6 Control |
| 100 | 558 (BN/LB) | Fuel Injector #4 Control |
| 101 | 556 (WH) | Fuel Injector #2 Control |
| 102 | - | NOT USED |
| 103 | 570 (BK/WH) | Power Ground |
| 104 | 529 (RD/YE) | Ignition Coil #4 |

5.0L

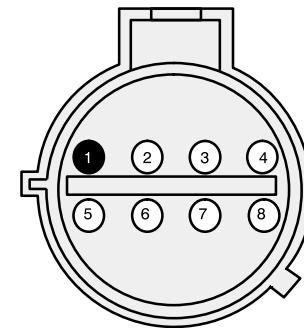

CONNECTOR REFERENCE LIST

| CONNECTOR | SECTION-PAGE |
|-----------|--------------|
| C112 | 30-5 |
| C180 | 30-5 |
| C282 | 59-8 |
| C283 | 59-7 |
| C286 | 62-7 |
| C287 | 62-7 |
| C291 | 14-2 |

C311 FUEL TANK ASSEMBLY (HARNESS SIDE)

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|-----|-------------|-----------------------------|
| 1 | - | NOT USED |
| 2 | 359 (GY/RD) | Signal Return |
| 3 | 791 (RD/PK) | Pressure Transducer Output |
| 4 | 351 (BN/WH) | Reference Voltage |
| 5 | 29 (YE/WH) | Instrument Cluster Output |
| 6 | 57 (BK) | Ground |
| 7 | 787 (PK/BK) | Inertia Fuel Shutoff Output |
| 8 | 651 (BK/YE) | Ground |