


SECTION 413-13A: Parking Aid
REMOVAL AND INSTALLATION

2014 Explorer Workshop Manual
Procedure revision date: 06/03/2013

Parking Aid Module (PAM)

Exploded View

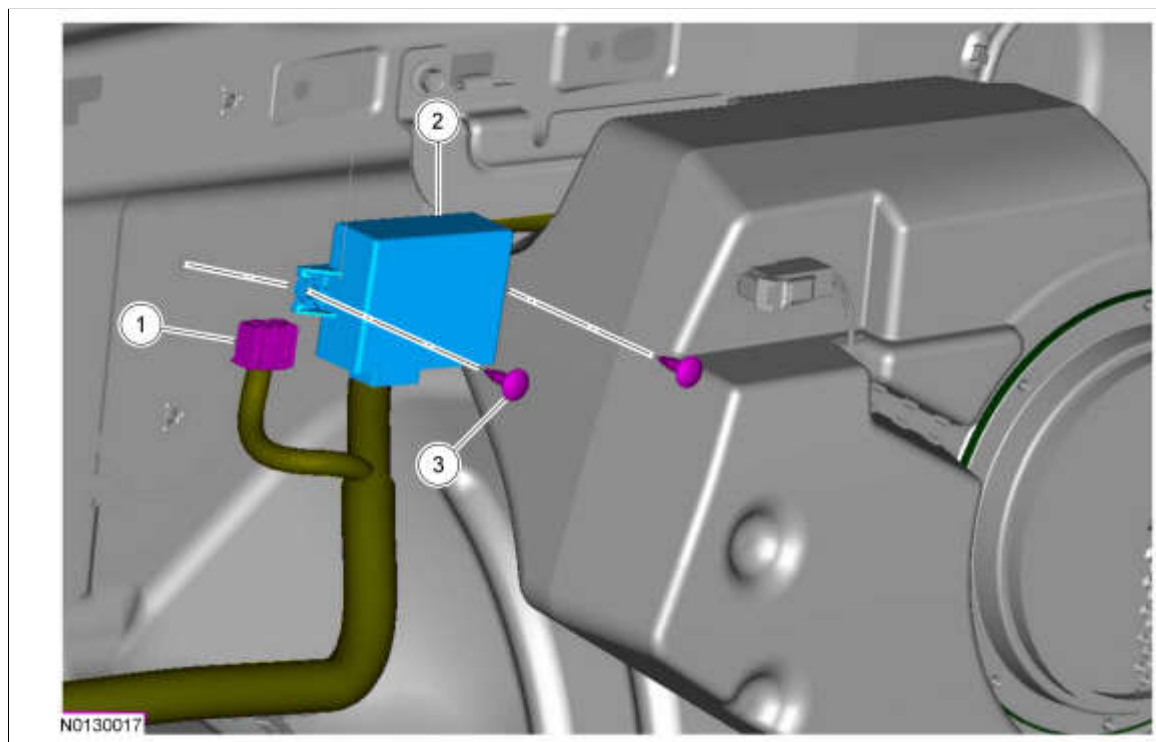

Item	Service Part Number	Description	Torque	Material Name	Notes
1	14A005	Parking Aid Module (PAM) electrical connector	-	-	-
2	15K866	Parking Aid Module (PAM)	-	-	-
3	W705635	Parking Aid Module (PAM) screw (2 required)	3 Nm (27 lb-in)	-	-

Removal


1. **NOTE:** Module configuration is required when a new PAM is being installed.

Upload the module configuration information from the PAM into the scan tool by following the instructions on the scan tool.

2. Position aside the liftgate weatherstrip.
3. **NOTICE:** To avoid damage to the liftgate scuff plate trim panel, remove any retaining clips from the body and attach them to the liftgate scuff plate trim panel before installing.

Remove the liftgate scuff plate trim panel.


1. Pull upward to release the retaining clips.

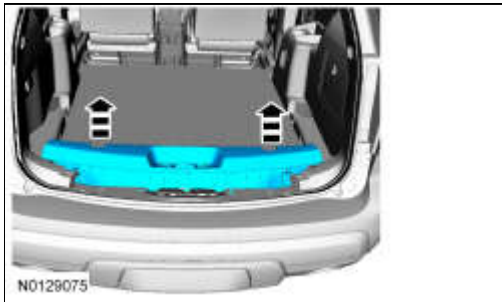


4. **NOTICE:** To avoid damage to the scuff plate trim panel, remove any retaining clips from the body and attach them to the scuff plate trim panel before installing.

Remove the rear RH door scuff plate trim panel.


1. Pull upward on the scuff plate trim panel to release the retaining clips.

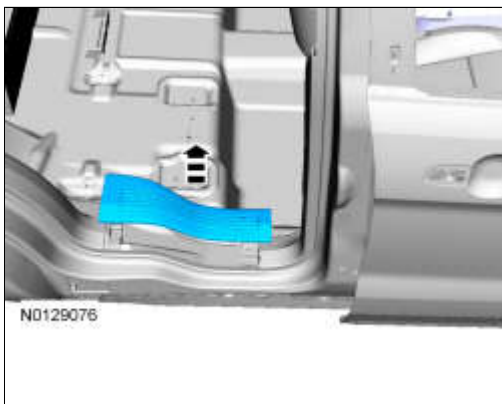

5. Remove the RH quarter trim panel retaining push pin.

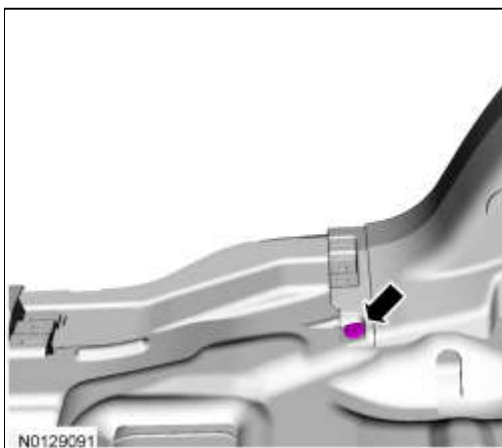

6. Position the RH second row seat in the flat position and then tilt the second row seat forward.
7. Position the RH third row seat in the flat position.
8. Remove the RH cargo retaining hooks.

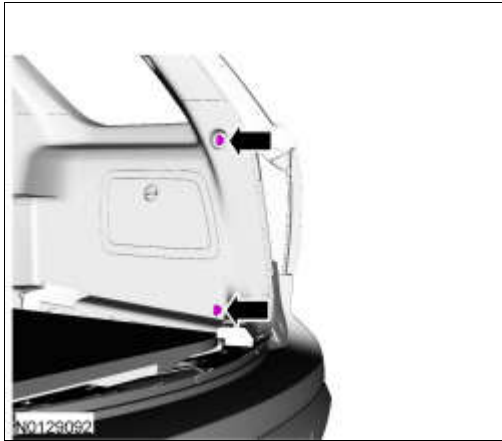


9. **NOTICE:** To avoid damage to the quarter trim panel, remove any retaining clips from the body and attach them to the quarter trim panel before installing.

Position the RH quarter trim panel aside.

1. Pull the RH quarter trim panel toward the inside of the vehicle to release the retaining clips



10. Remove the 2 bolts and remove the PAM.
1. To install, tighten to 3 Nm (27 lb-in).
 2. Disconnect the electrical connector.

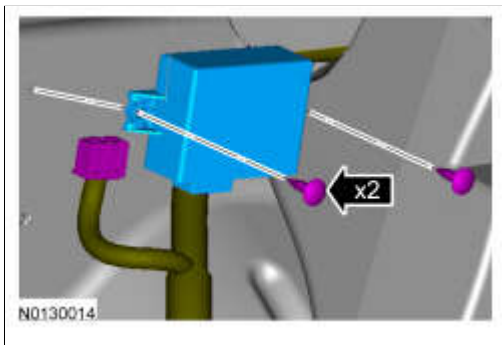

Installation

1. To install, reverse the removal procedure.

2. Download the PAM configuration information from the scan tool to the new PAM by following the instructions on the scan tool.
-