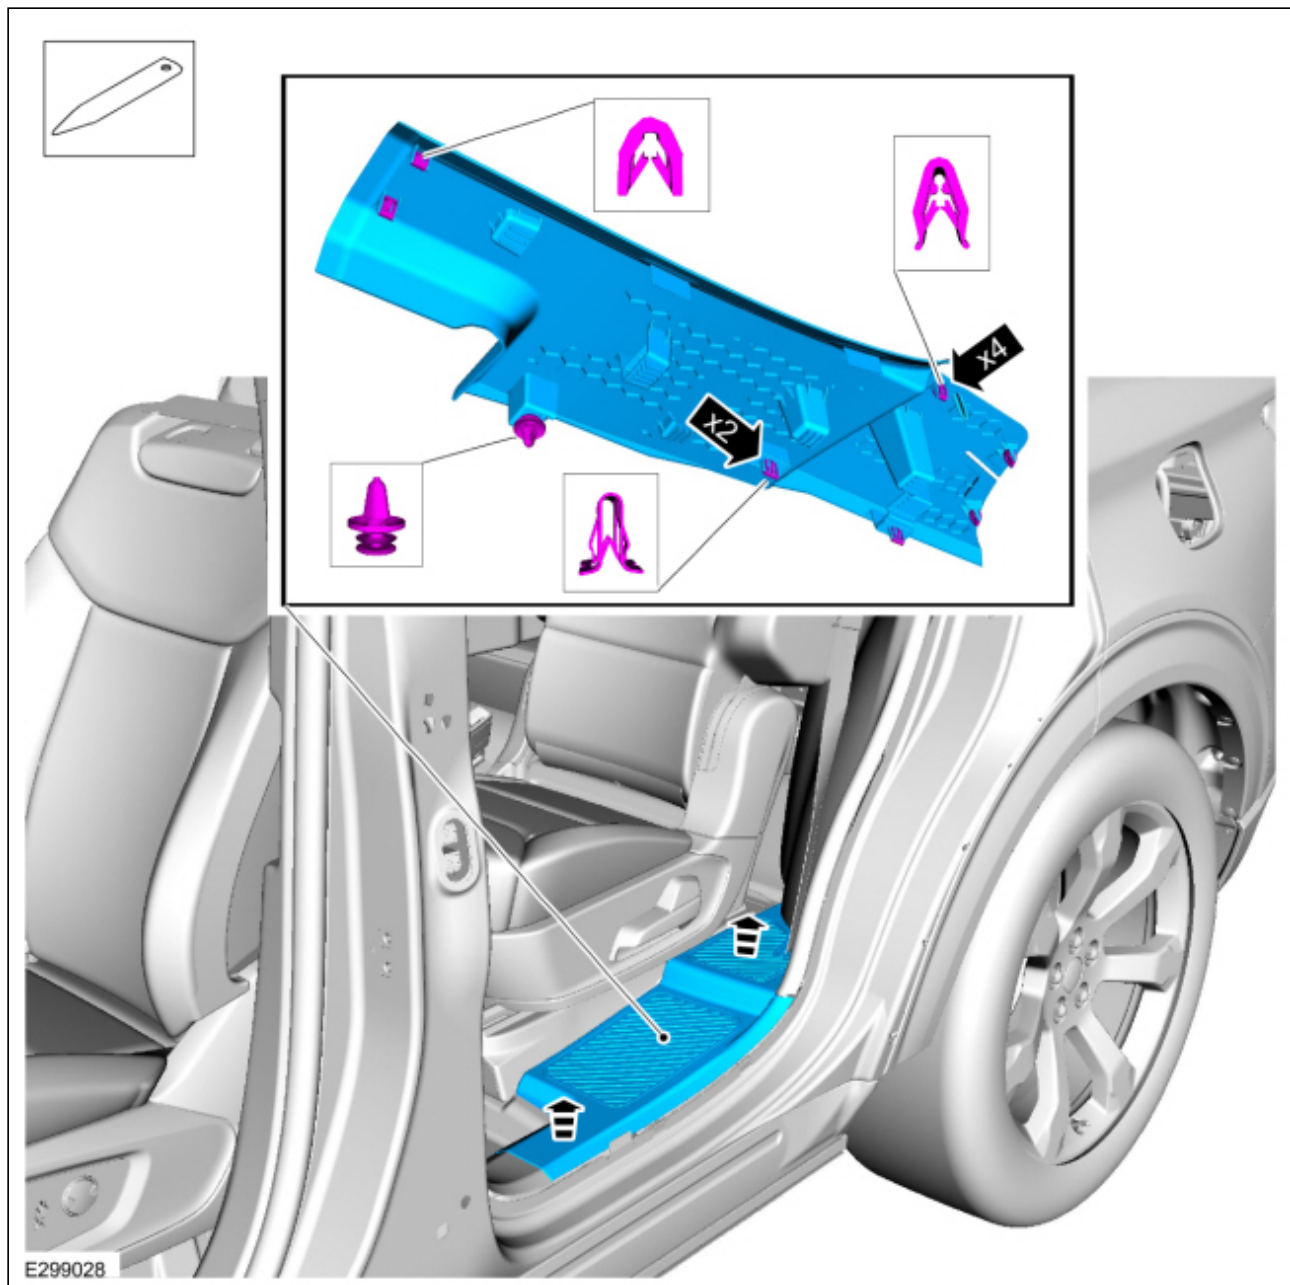


**Rear Scuff Plate Trim Panel****Special Tool(s) / General Equipment**

Interior Trim Remover

**Removal****NOTE:** LH (left hand) shown, RH (right hand) similar.

1. Release the clips and remove the rear scuff plate trim panel.  
Use the General Equipment: Interior Trim Remover

**Vehicles with police package**

2.


Remove the rear scuff plate trim panel.

1. Remove the pin-type retainer.

Use the General Equipment: Interior Trim Remover

2. Release the clips and remove the rear scuff plate trim panel.

Use the General Equipment: Interior Trim Remover

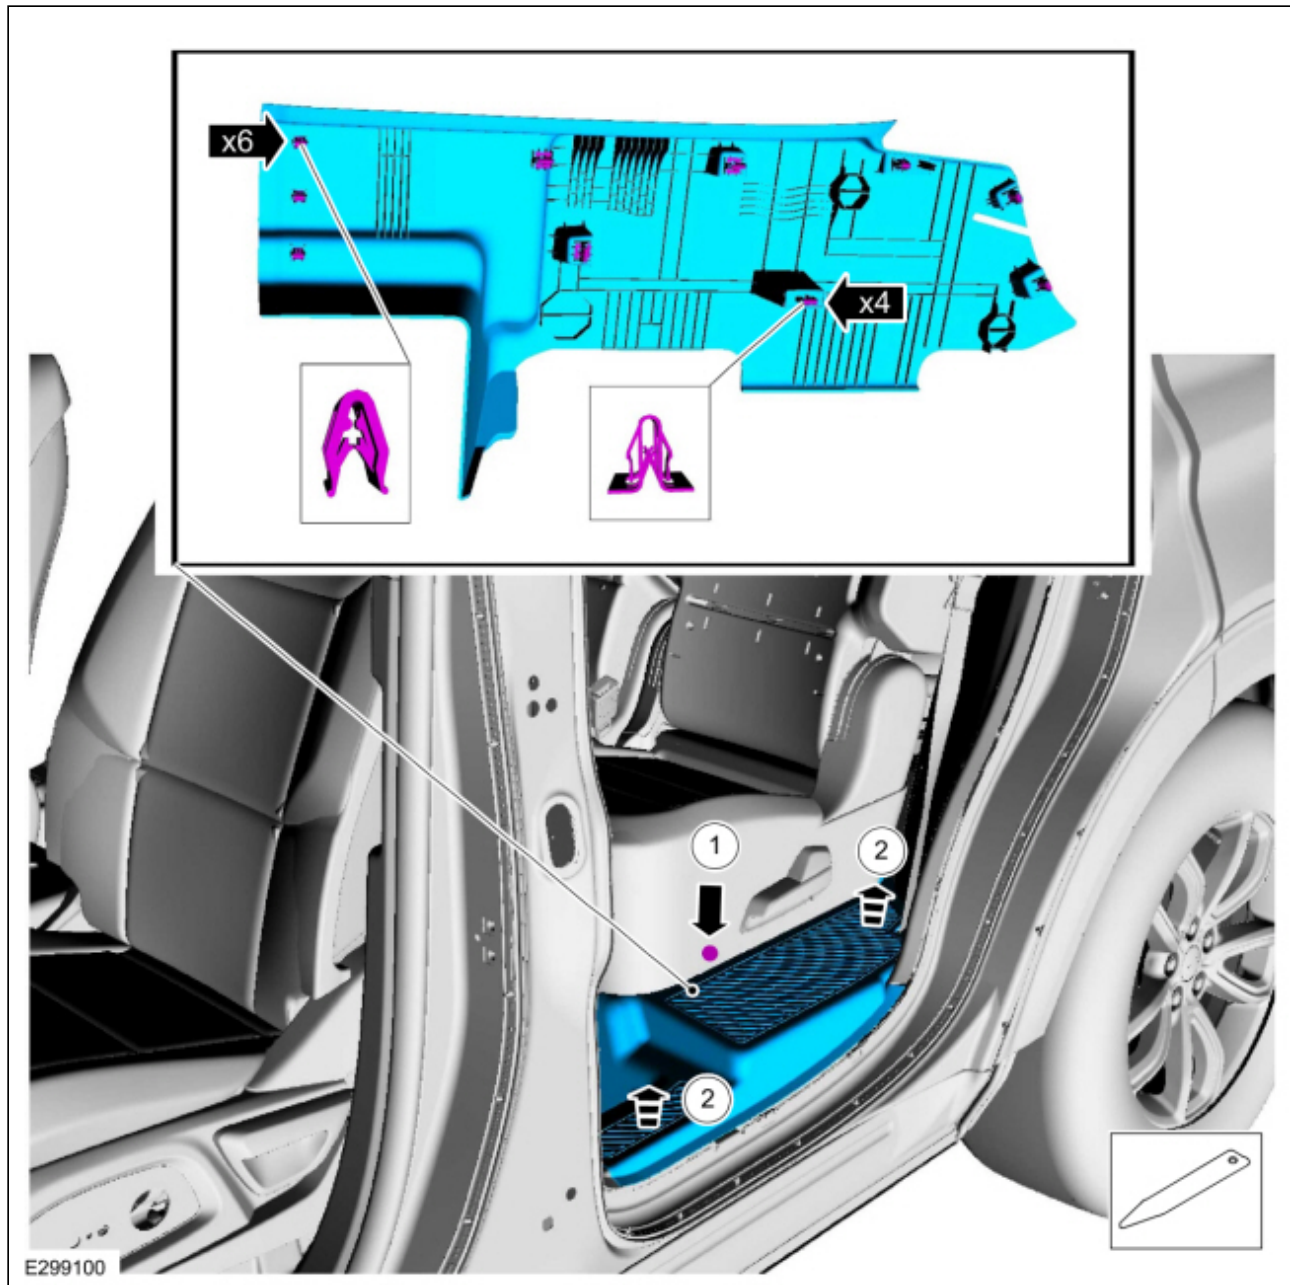

## Installation

1. To install, reverse the removal procedure.

2. Inspect and position the rear door weather strip lip so that it overlaps the top of the rear scuff plate trim panel.



© Copyright 2021, Ford Motor Company.